

Highlights:

- Ready-coated plate
- One and a half hour (leaf/seedling) or two hour (seed) protocols
- Consistent quality
- Higher efficiency
- High sensitivity seed protocol option

Contents of Kit:

- Anti-Lettuce Mosaic Virus antibody-coated solid plate
- Lettuce Mosaic Virus Enzyme Conjugate
- 10X Leaf & Seed Extraction Buffer (makes 1 liter)
- Packet Wash Buffer Salts
- Substrate
- Stop Solution

Materials Needed:

- multi-channel pipette that will measure 100 μ L
- racked dilution tubes for loading samples into the plate with a multi-channel pipette (optional)
- marking pen (indelible)
- tape or Parafilm®
- timer
- distilled or deionized water for preparing Wash Buffer and for diluting 10X Leaf & Seed Extraction Buffer
- wash bottle, or microtiter plate or strip washer
- orbital plate shaker
- microtiter plate reader or strip reader capable of reading 450 nanometers (nm)



Prepare wash buffer and extraction solutions

Catalog Number AP 059

Intended Use

The QualiPlate Kit for Lettuce Mosaic Virus screens for the presence of Lettuce Mosaic Potyvirus (LMV) in seed, leaf or seedling extracts obtained by different grinding methods. The antibody used in the kit has been shown to be reactive to at least six geographical isolates of the virus. In studies on seed lots determined to be LMV positive by other test methods, this kit was able to consistently detect the presence of the virus (using minimum sample sizes of 30,000 seeds and minimum sub-sample sizes of 500 seeds). This kit also has an alternative high sensitivity seed protocol (see section in "Precautions and Notes").

Preparation of Solutions

- **Wash Buffer:** Add the contents of the packet of Wash Buffer Salts (phosphate buffered saline, pH 7.4 – 0.05% Tween 20) to 1 liter of distilled or deionized water, and stir to dissolve. Store refrigerated when not in use; warm to room temperature prior to assay. Additional 1L dry packets may be purchased from Sigma Chemicals, Cat#P-3563, or similar recipes may be prepared from salts on site.
- **1X Extraction Buffer:** It is not required to refrigerate the 10X Leaf & Seed Extraction Buffer, but if it has been, precipitates will form. Allow to warm to room temperature, then stir or shake to dissolve precipitates completely before proceeding. To make 1X Extraction Buffer, add the entire 100 mL bottle of 10X Leaf & Seed Extraction Buffer to 900 mL of distilled or deionized water in a suitable container, and mix thoroughly to dissolve any remaining precipitates. Store refrigerated when not in use; warm to room temperature prior to assay. Additional 10X buffer may be purchased from EnviroLogix (Cat#KR160).

Sample Preparation

Seeds: The sample must be extracted with 1X Extraction Buffer at a ratio of 1:15 (gram of seeds to mL of buffer). For example:

- 0.5 g of seed : 7.5 mL of Extraction Buffer
- 0.05 g of seed : 0.75 mL of Extraction Buffer

All seeds must be thoroughly ground/cracked in order for the internal tissue to come in contact with the buffer. Allow seed tissue to extract in buffer for 1 hour minimum at 4°C. Obtain a clear middle extract to run in the assay.

Leaf: The sample must be extracted with 1X Extraction Buffer at a ratio of 1:10 (gram of leaf tissue to mL of buffer). For example:

- 0.5 g of leaf : 5 mL of Extraction Buffer

All leaf tissue must be thoroughly macerated in order for ideal sample expression, and may be tested immediately.

Seedling: The sample must be extracted with 1X Extraction Buffer at a ratio of 1:10 (gram of seedling to mL of buffer). For example:

- 0.5 g of seedling : 5 mL of Extraction Buffer

All seedling tissue must be thoroughly macerated in order for ideal sample expression, and may be tested immediately.



Add Extraction Buffer, controls,
and sample extracts



Mix, incubate



Bottle Wash method



Add conjugate, mix, incubate, wash



Add substrate, mix, incubate

How to Run the Assay

- Read all of these instructions before running the kit.
- Allow all reagents to reach room temperature before beginning (at least 30 minutes with un-boxed plates and reagents at room temperature - do not remove plates from bag with desiccant until they have warmed up).
- **Organize all reagents, sample extracts, and pipettes so that step A1 or B1 can be performed in 15 minutes or less;** the use of a multi-channel pipette is strongly recommended for all reagent and extract transfers.
- Once all components have reached room temperature, remove the plate from the pouch. If less than the entire plate is to be used, refer to EnviroLogix' Product Application Guide - multiple runs on solid plate.
- Use the well identification markings on the plate edge as a guide when adding the samples and reagents. It is recommended that at least two wells each of 1X Extraction Buffer as Blanks and known-negative lettuce seed, leaf or seedling extract be run on each plate. Additional quality control samples may be added at the discretion of the user. Sample extracts may be run in either single or duplicate wells.

A. SEED PROTOCOL

- A1. Add **100 µL** of **Extraction Buffer (Blank)**, **100 µL** of any **user-prepared negative control seed extract**, and **100 µL** of each **sample extract** to their respective wells. Follow the same order of addition for all reagents. Treat each plate as an independently timed assay.

NOTE: It is strongly recommended that a multi-channel pipette be used in steps A1, A5, A8 and A9.

- A2. Thoroughly mix the contents of the wells by moving the plate in a rapid circular motion on the bench top for a full 20-30 seconds. Be careful not to spill the contents!


- A3. Cover the wells with tape or Parafilm to prevent evaporation and **incubate for 30 minutes at ambient temperature** on an orbital plate shaker at 200 rpm. **Note: Shaking during incubation steps is mandatory where called for. Failure to do so will result in up to 50% loss in assay sensitivity.**

Protocol option: For testing convenience, at this point samples may be incubated overnight in the refrigerator (up to 16 hours at 5°C). Allow plates to come to room temperature with the rest of the kit reagents the next morning, before going on to step A4.

- A4. After incubation, carefully remove the covering and empty the contents of the wells into a sink or other suitable container by inverting quickly and vigorously shaking the plate. Flood the wells completely with **Wash Buffer**, then empty as directed above. Repeat this wash step at least three times. After the final wash step, keep the plate inverted and tap firmly on a dry paper towel to remove as much Wash Buffer as possible.

If samples were incubated overnight, increase the number of wash cycles to 8.


- A5. Add **100 µL** of **Lettuce Mosaic Virus Enzyme Conjugate** to each well.

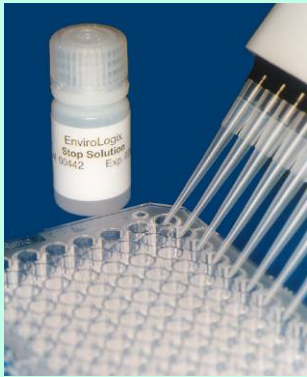

Add Stop Solution



Read plate within 30 minutes of adding Stop Solution

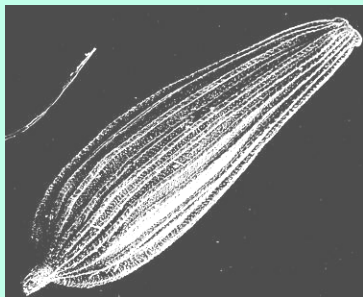

- A6. Thoroughly mix the contents of the wells, as in step A2. Cover the wells with new tape or Parafilm and **incubate** for **1 hour** at **ambient temperature** on an orbital plate shaker at 200 rpm. **Note: Shaking during incubation steps is mandatory where called for. Failure to do so will result in up to 50% loss in assay sensitivity.**
- A7. Wash the wells again as described in step A4. Alternatively, perform four washes (300 μL /well) with a microtiter plate or strip washer.
- A8. Add **100 μL** of **Substrate** to each well. Mix thoroughly as in step A2. Cover the wells with new tape or Parafilm and incubate for **30 minutes** (for best results) at **ambient temperature**.
- A9. Add **100 μL** of **Stop Solution** to each well and mix briefly. This will change the blue color in the wells to yellow. Read the plate at **450 nm**, with a reference wavelength of 630 or 650 nm. Read the stopped plate within 30 minutes; color may fade beyond that time.
- NOTE: Stop Solution is 1 N HCl. Handle carefully.**

B. LEAF & SEEDLING PROTOCOL

- B1. Add **100 μL** of **Lettuce Mosaic Virus Enzyme Conjugate** to each well.
- B2. Immediately add **100 μL** of **Extraction Buffer**, **100 μL** of any **user-prepared negative control leaf and/or seedling extract**, and **100 μL** of each **sample extract** to their respective wells. Follow the same order of addition for all reagents. Treat each plate as an independently timed assay.

NOTE: It is strongly recommended that a multi-channel pipette be used in steps B1, B2, B6 and B7.

- B3. Thoroughly mix the contents of the wells by moving the plate in a rapid circular motion on the bench top for a full 20-30 seconds. Be careful not to spill the contents!
- B4. Cover the wells with tape or Parafilm to prevent evaporation and **incubate** for **1 hour** at **ambient temperature** on an orbital plate shaker at 200 rpm. **Note: Shaking during incubation steps is mandatory where called for. Failure to do so will result in up to 50% loss in assay sensitivity.**

Protocol option: For testing convenience, at this point samples and conjugate may be incubated overnight in the refrigerator (~ 16 hours at 5°C). Allow plates to come to room temperature with the rest of the kit reagents the next morning, before going on to step B5.

- B5. After incubation, carefully remove the covering and empty the contents of the wells into a sink or other suitable container by inverting quickly and vigorously shaking the plate. Flood the wells completely with **Wash Buffer**, then empty as directed above. Repeat this wash step at least three times. After the final wash step, keep the plate inverted and tap firmly on a dry paper towel to remove as much Wash Buffer as possible.

If samples were incubated overnight, increase the number of wash cycles to 8.

- B6. Add **100 μL** of **Substrate** to each well. Mix thoroughly as in step B3. Cover the wells with new tape or Parafilm and incubate for **30 minutes** (for best results) at **ambient temperature**.



B7. Add **100 µL of Stop Solution** to each well and mix briefly. This will change the blue color in the wells to yellow. Read the plate at **450 nm**, with a reference wavelength of 630 or 650 nm. Read the stopped plate within 30 minutes; color may fade beyond that time.

NOTE: Stop Solution is 1 N HCl. Handle carefully.

How to Interpret the Results

Spectrophotometric Measurement

Set the wavelength of the microtiter plate reader to **450 nanometers** (nm). (If it has dual wavelength capability, use 600, 630 or 650 nm as the reference wavelength.)

Interpreting Results

Compare the Optical Density (OD) of the sample extracts to those of the mean Extraction Buffer wells, or preferably, to known-negative seed, leaf or seedling extract wells, to determine presence or absence of Lettuce Mosaic Virus in your sample extract. Samples with absorbances significantly greater than those of the Leaf and Seed Extraction Buffer and/or negative extract wells are presumed to be positive for Lettuce Mosaic Virus.

General Guidelines:

- Mean OD of Extraction Buffer wells should not exceed 0.10.
- Mean OD of LMV-free lettuce seed, leaf or seedling extracts should not exceed 0.15.

If test results consistently fall outside these guidelines, please contact EnviroLogix' technical service.

Note: This test kit, especially when following the high sensitivity protocol, is capable of detecting extremely low levels of LMV contamination.

Precautions and Notes

- Observe any applicable regulations, federal or state guidelines, or in-house lab safety protocols when disposing of samples and kit reagents.
- Store all QualiPlate components at 4°C to 8°C (39°F to 46°F) when not in use, excluding the 10X Leaf & Seed Extraction Buffer, which should be stored at ambient temperature (18°C to 27°C or 64°F to 81°F).
- Do not expose QualiPlate components to temperatures greater than 37°C (99°F) or less than 2°C (36°F).
- Allow all reagents to reach ambient temperature (18°C to 27°C or 64°F to 81°F) before use.
- Do not use kit components after the expiration date.
- Do not use reagents or test plates from one QualiPlate with reagents or test plates from a different QualiPlate.
- Do not use samples prepared for analysis in other test kits; do not run sample extracts prepared for this assay in other brands of test kits.
- **Do not expose Substrate to sunlight** during pipetting or while incubating in the test wells.
- **Be sure to read the results of stopped color development at 450 nm, not 405 nm.**



- Do not dilute or adulterate test reagents or use samples not called for in the test procedure.
- Quality of results is dependent upon following the assay protocol as directed.
- As with all tests, it is recommended that results be confirmed by an alternate method when necessary.
- **High Sensitivity Seed Protocol.** This kit can be used with an alternative extraction buffer to increase its sensitivity up to tenfold. Prepare and use the High Sensitivity Extraction Buffer as directed below, and substitute it for the 1X Extraction Buffer called for in the Seed Sample Preparation and Seed Assay Protocol sections.

High Sensitivity Seed Extraction Buffer:

In 200 mL of deionized water, dissolve:

	<u>Per Liter</u>
Sodium Phosphate (Na_2HPO_4) Dibasic anhydrous	5.4 g
Sodium Phosphate (NaH_2PO_4) Monobasic anhydrous	1.56 g
Thioglycolic Acid* ($\text{C}_2\text{H}_4\text{O}_2\text{S}$)	1.0 mL

Bring volume up to a liter.

Adjust pH to 7.4 using 8 M, NaOH.

Prepare before use.

* SIGMA, T3758, Thioglycolic acid minimum 98%



**For Technical Support
Contact Us At:**

EnviroLogix

500 Riverside Industrial
Parkway
Portland, ME 04103-1486
USA

Tel: (207) 797-0300
Toll Free: 866-408-4597
Fax: (207) 797-7533

e-mail:

horticulture@envirologix.com

website:

www.envirologix.com



LIMITED WARRANTY

EnviroLogix Inc. (“EnviroLogix”) warrants the products sold hereunder (“the Products”) against defects in materials and workmanship when used in accordance with the applicable instructions for a period not to extend beyond a product’s printed expiration date. If the Products do not conform to this Limited Warranty and the customer notifies EnviroLogix in writing of such defects during the warranty period, including an offer by the customer to return the Products to EnviroLogix for evaluation, EnviroLogix will repair or replace, at its option, any product or part thereof that proves defective in materials or workmanship within the warranty period.

ENVIROLOGIX MAKES NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. The warranty provided herein and the data, specifications and descriptions of EnviroLogix products appearing in EnviroLogix published catalogues and product literature are EnviroLogix’ sole representations concerning the Products and warranty. No other statements or representations, written or oral, by EnviroLogix’ employees, agents or representatives, except written statements signed by a duly authorized officer of EnviroLogix Inc., are authorized; they should not be relied upon by the customer and are not a part of the contract of sale or of this warranty.

EnviroLogix does not warrant against damages or defects arising in shipping or handling, or out of accident or improper or abnormal use of the Products; against defects in products or components not manufactured by EnviroLogix, or against damages resulting from such non-EnviroLogix made products or components. EnviroLogix passes on to customer the warranty it received (if any) from the maker thereof of such non-EnviroLogix made products or components. This warranty also does not apply to Products to which changes or modifications have been made or attempted by persons other than pursuant to written authorization by EnviroLogix.

THIS WARRANTY IS EXCLUSIVE. The sole and exclusive obligation of EnviroLogix shall be to repair or replace the defective Products in the manner and for the period provided above. EnviroLogix shall not have any other obligation with respect to the Products or any part thereof, whether based on contract, tort, strict liability or otherwise. Under no circumstances, whether based on this Limited Warranty or otherwise, shall EnviroLogix be liable for incidental, special, or consequential damages.

This Limited Warranty states the entire obligation of EnviroLogix with respect to the Products. If any part of this Limited Warranty is determined to be void or illegal, the remainder shall remain in full force and effect.

*Parafilm is a registered trademark of American Can Corporation
EnviroLogix, the EnviroLogix logo, and QualiPlate are trademarks
of EnviroLogix Inc.*

© EnviroLogix 2010