

QuickStix™ Kit for Corn QuickGuide

Sample Preparation



1. Determine sample weight and place in properly sized jar



2. Cover blender and grind



Alternately, grind with coffee grinder


Test Procedure



1. Measure and add water to jar or bag



2. Seal container, shake to wet entire sample

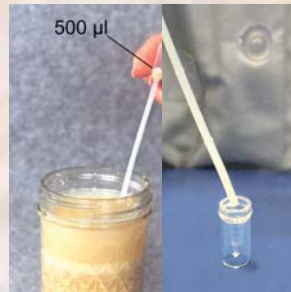


3. Add extract to vial



4. Insert strip with arrows pointing down; wait 5 minutes

Test Interpretation

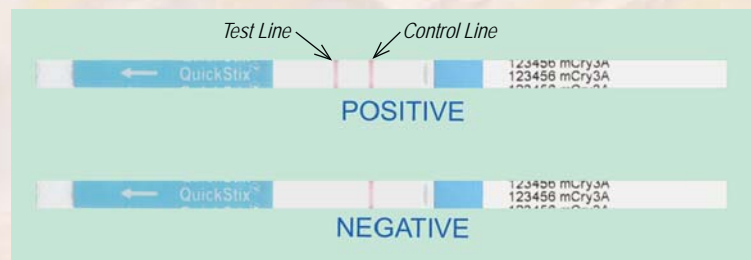

If two lines form, the sample is positive

Control Lines always need to be present